


Rubn®

DESIGN NICLAS HOFLIN

— INSTALLATION INSTRUCTION —

ATTACHMENT TO CEILING - MONROE CEILING

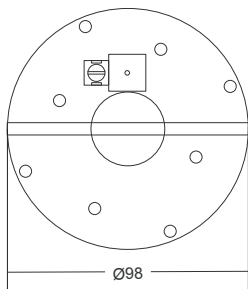

1. Loosen set screw **A** to slide back cap **B**.
Attach ceiling plate by using 4 screws (not included).
2. Hang the pendant as shown in step 2.
Connect the cables accordingly using the included connectors **C** and both the earth connectors.
3. Slide cap **B** against ceiling and tighten set screw **A**.

